


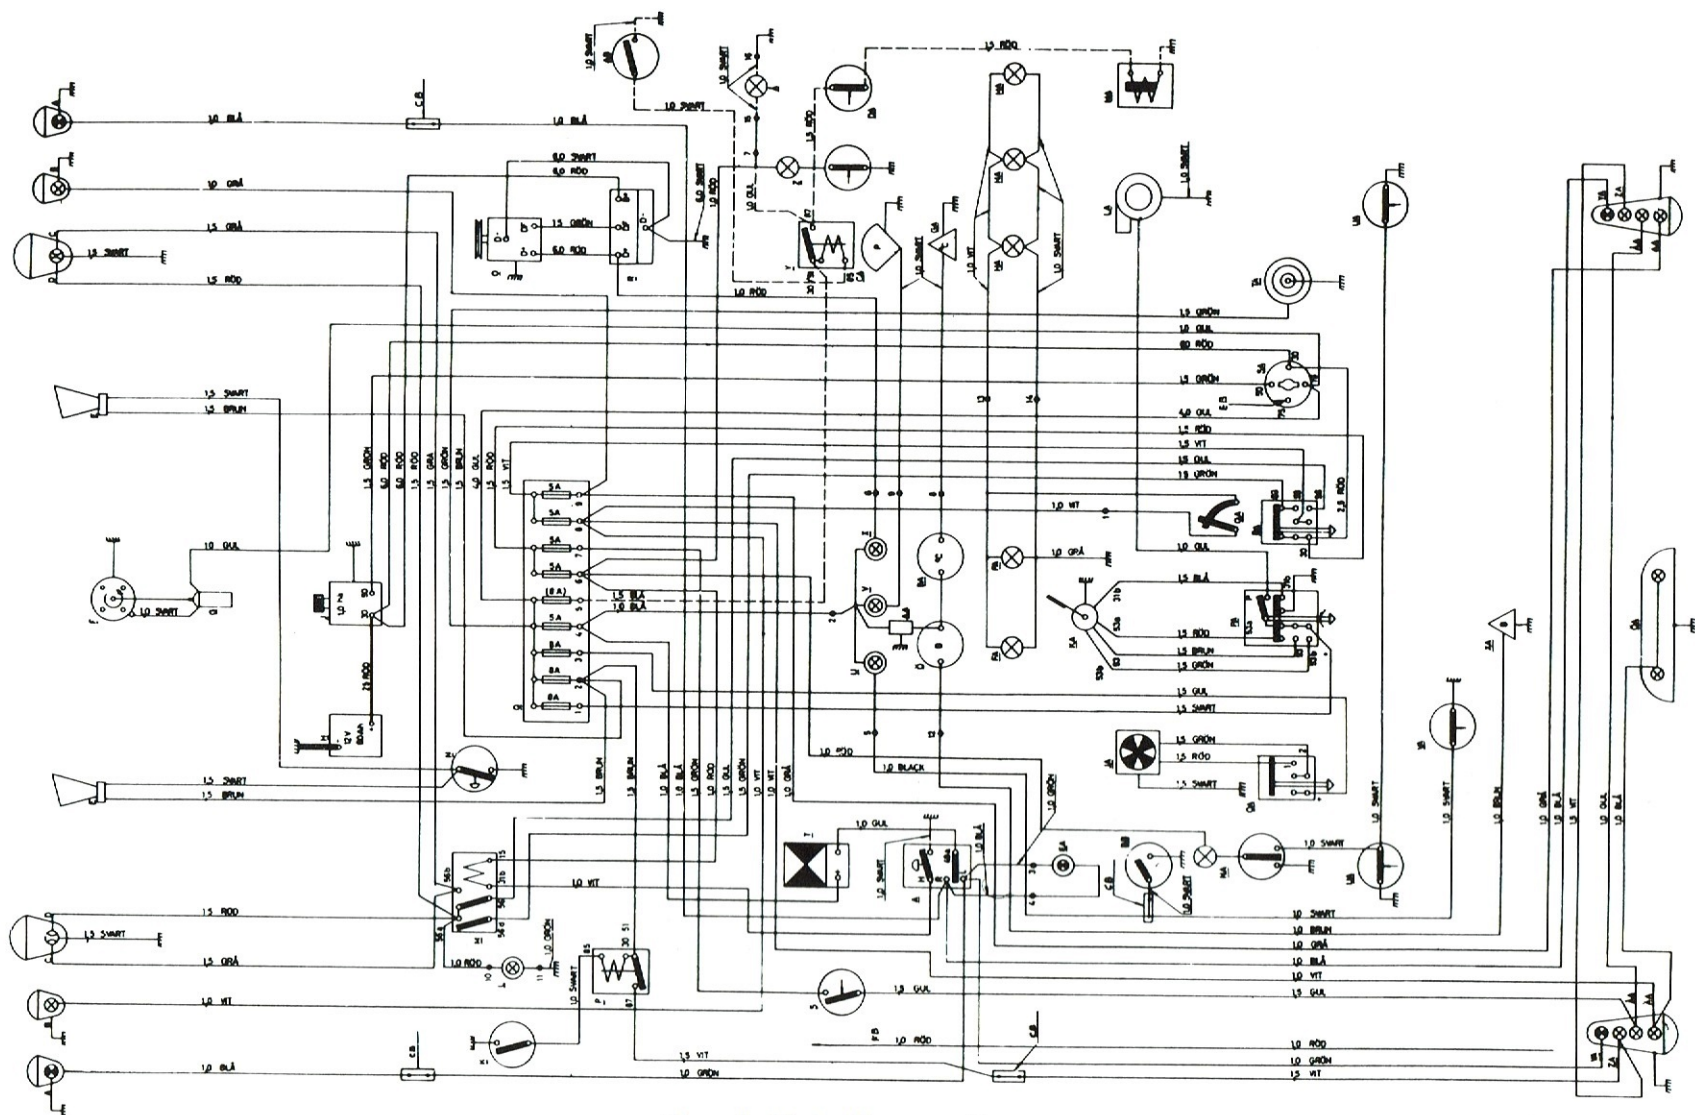

www.ClassicKabelboomCompany.com

Wiring diagram, 140 series - 1968

- | | | | | | | | |
|--------|---|---------|------------------------------|---------|-------------------------------|---------|---|
| 1 (A) | Direction indicators | 17 (R) | Regulator | 34 (GA) | Water temperature transmitter | 51 (AA) | Stop light |
| 2 (B) | Sidelights | 18 (S) | Handbrake switch | 35 (HA) | Heater control panel lights | 52 (AA) | Tail light |
| 3 (C) | Headlamps (dipped) | 19 (T) | Flasher unit | 36 (JA) | Blower | 53 (OA) | Number plate light |
| 4 (D) | Headlamps (main beam) | 20 (U) | Handbrake on, indicator | 37 (KA) | Windscreen wiper | 54 (AB) | Overdrive control switch |
| 5 (E) | Horn | 21 (V) | Low oil pressure indicator | 38 (LA) | Windscreen washer | 55 (BB) | Brake failure warning |
| 6 (F) | Distributor | 22 (X) | Charging indicator | 39 (MA) | Overdrive solenoid | 56 (K) | Starter/reversing light switch on automatic gearbox |
| 7 (G) | Ignition coil | 23 (Y) | Connector | 40 (NA) | Interior lighting | 57 | Glove compartment switch |
| 8 (H) | Battery | 24 (Z) | Glove compartment light | 41 (OA) | Blower control switch | 58 | Rear window heater (1970 only) |
| 9 (J) | Starter | 25 (A) | Overdrive indicator | 42 (PA) | Wiper and washer switch | 59 | Switch for 58 |
| 10 (K) | Reversing light switch | 26 (A) | Column lights switch | 43 (QA) | Dimmer | 60 | Sidelights repeater (USA only) |
| 11 (L) | Main beam indicator | 27 (O) | Fuel gauge | 44 (RA) | Lighting switch | 61 | Relay for 58 |
| 12 (M) | Headlamp relay | 28 (AA) | Voltage stabilizer | 45 (SA) | Ignition switch | 62 | Instrument panel connectors |
| 13 (N) | Horn ring | 29 (BA) | Temperature gauge | 46 (TA) | Cigar lighter | 63 | Ignition lock warning buzzer (USA only) |
| 14 (O) | Alternator or generator | 30 (CA) | Oil pressure transducer | 47 (VA) | Door contact | 64 (VA) | Driver's door switch |
| 15 (P) | Reversing light relay or starter relay on automatic gearbox | 31 (DA) | Overdrive switch | 48 (VA) | Switch on handbrake | | |
| 16 (Q) | Fusebox | 32 (EA) | Direction indicator repeater | 49 (XA) | Fuel level transmitter | | |
| | | 33 (FA) | Panel lighting | 50 (ZA) | Reversing light | | |