

682271

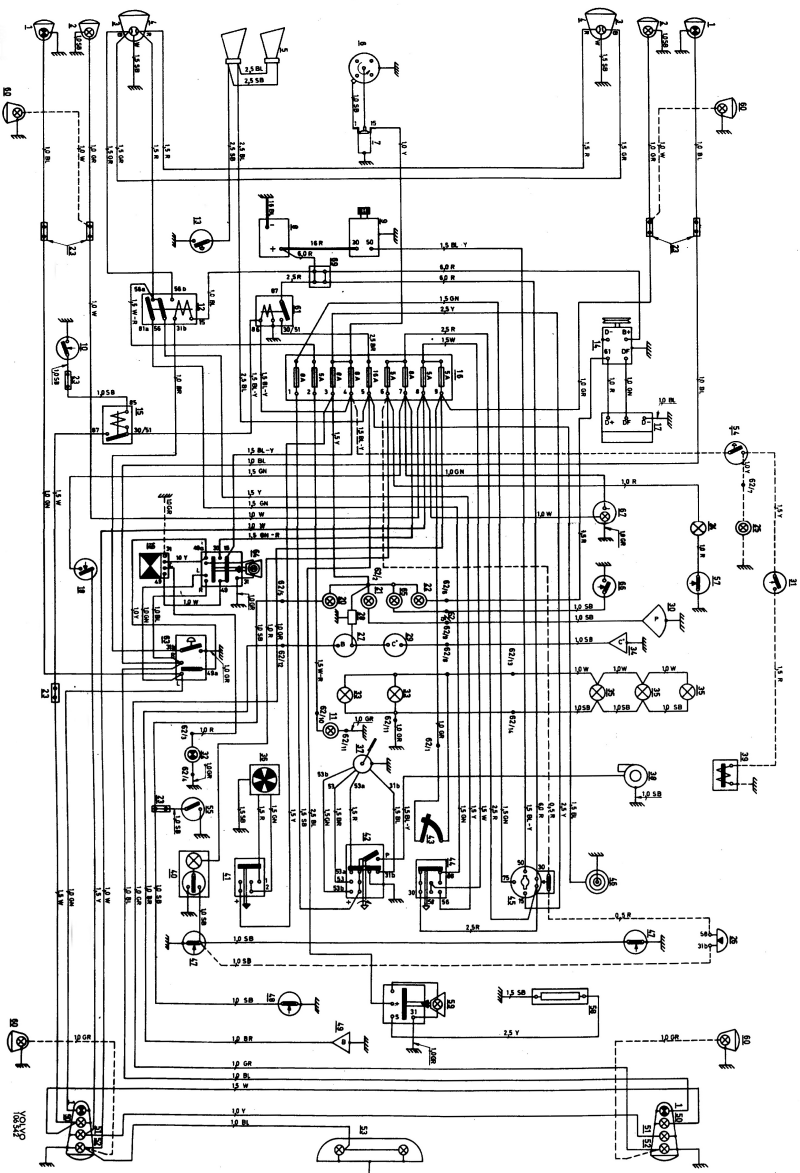


Illustration 3-A. Wiring diagram 142/144 Carb. engine

Pos.	Title	Spec
1	Dir. ind. flashers	32 CP
2	Parking lights	5 W
3	Headlight dipped beams	5 W
4	Headlight main beams	40 W
5	Don't blower firing order	1-3-4-2
6	Battery	12 V 60 Ah
7	Ignition coil	10 hp
8	Starter motor	1.2 W
9	Contact for reverse light (M40 and M41 only)	
10	Main beam warning lamp	
11	Step relay for main and dipped beams	
12	Headlight flashers	
13	Horn ring	
14	Alternator	
15	Relay for reverse light on M40, M41 and starter relay on BW 35	12 V 55 A
16	Fuelbox	
17	Charging regulator	
18	Ignition switch	
19	Flasher unit	
20	Brake warning lamp	1.2 W
21	Oil pressure warning lamp	1.2 W
22	Battery charging warning lamp	1.2 W
23	Connector	
24	Glove locker light	2 W
25	Warning buzzer, ignition key	
26	Fuel gauge	
27	Temperature gauge	
28	Oil pressure sender	
29	Contact for overdrive on M41 gearbox	
30	Instrument lighting	1.2 W
31	Temperature gauge sensor	2x3 W
32	Heater control light	3x1.2 W
33	Heater	
34	Windshield wipers	
35	Windshield wipers	
36	Windshield wipers	
37	Windshield wipers	
38	Windshield wipers	
39	Windshield wipers	
40	Interior light 10 W	
41	Switch for heater	
42	Switch for windshield wipers and washers	
43	Panel light rheostat	
44	Light switch	
45	Ignition switch	
46	Ignition switch	
47	Door switch	
48	Switch for parking brake control	
49	Fuel gauge tank unit	15 W
50	Reverse lights	25 W
51	Brake stoplights	5 W
52	Left lights	2x5 W
53	Left lights	
54	Switch for overdrive M41	
55	Brake warning switch	
56	Contact on gearbox BW 35	
57	Switch glove locker light	
58	Electric heated rear window	
59	Electric heated rear window	
60	Side entry lights (USA only)	
61	Main relay, starter switch	
62	Terminal at instrument	
63	Switch for dir. ind. and headlight flashers	
64	Switch for hazard warning flasher	
65	Choke warning lamp	
66	Choke control contact	
67	Clock	
68	Warning buzzer, headlights	
69	Connector	
70	Shift positions light	
71	Switch, seat buckle, passenger	
72	Switch, passenger seat	
73	Warning buzzer, seat	
74	Warning buzzer, seat	
75	Relay, seat belts	
76	Contact, M40, M41 gearboxes	
77	Switch, seat buckle, driver	