

Pos. Title	Date
1. Battery	12 V 80 Ah
2. Connection box	
3. Ignition switch	
4. Ignition coil	
5. Distributor, firing sequence	1-3-4-2
6. Starter motor	
7. Alternator	
8. Charging regulator	
9. Fuelcocks	
10. Light switch	
11. Dip relay for main and dipped beams	
12. Headlights	46 W
13. Dipped beams	46 W
14. Position lights	5 W
15. Rear lights	5 W
16. Side marking lights	5 W
17. Plate light	2x5 W
18. Brake stop light contact	
19. Brake stop lights	32 cp
20. Connection at instrument	
21. Contact on gearbox M 40, M 41	
22. Reverse lights	32 cp
23. Flasher unit	
24. Div. ind. switch	
25. Switch, emergency warning flashers	
26. Flasher lights	32 cp
27. Part of splice connection block	
28. Rev. counter	
29. Thermometer	
30. Cool pump	
31. Voltage stabilizer	
32. Flasher light warning lamp	1.2 W
33. Diode	
34. Warning lamp for main beams	1.2 W
35. Warning lamp for battery charging	1.2 W
36. Parking brake warning lamp	1.2 W
37. Choke warning lamp	1.2 W
38. Oil pressure warning lamp	1.2 W
39. Brake warning lamp	1.2 W
40. Vacuum warning lamp	
41. Parking brake contact	
42. Choke control contact	
43. Temperature sensor	
44. Oil pressure sensor	
45. Brake warning contact	
46. Brake level sender	
47. Horn	
48. Horn ring	
49. Switch, windshield wipers/washer	
50. Windshield wipers	
51. Windshield washer	
52. Switch, fan	
53. Fan	
54. Switch, elec. heated rear window	
55. Elec. heated rear window	
56. Clock	
57. Cigarette lighter	
58. Reset for instrument panel lighting	
59. Instrument panel lighting	3x3 W
60. Lighting for control panel	3x1.2 W
61. Shift positions light, ext. trans.	1.2 W
62. Glove locker contact	
63. Glove locker lamp	
64. Interior lamp	
65. Door switch on left side	
66. Door switch on right side	
67. Reminder buzzer for ignition key	
68. Joint	
69. Connection at instrument	
70. Passenger seat contact	
71. Reminder buzzer for seat belt	
72. Seat belt warning lamp	1.2 W
73. Contact for seat belt	
74. Switch for overdrive M 41	
75. Contact for overdrive on gearbox M 41	
76. Solenoid for overdrive on gearbox M 41	
77. Overdrive warning lamp	1.2 W
78. Contact on automatic transmission BW 15	
79. Reminder buzzer for lights	
80. Switch for elec. heated tailgate window	
81. Tailgate window wiper	
82. Tailgate window washer	
83. Rear roof light	10 W
84. Control unit	
85. Throttle valve switch	

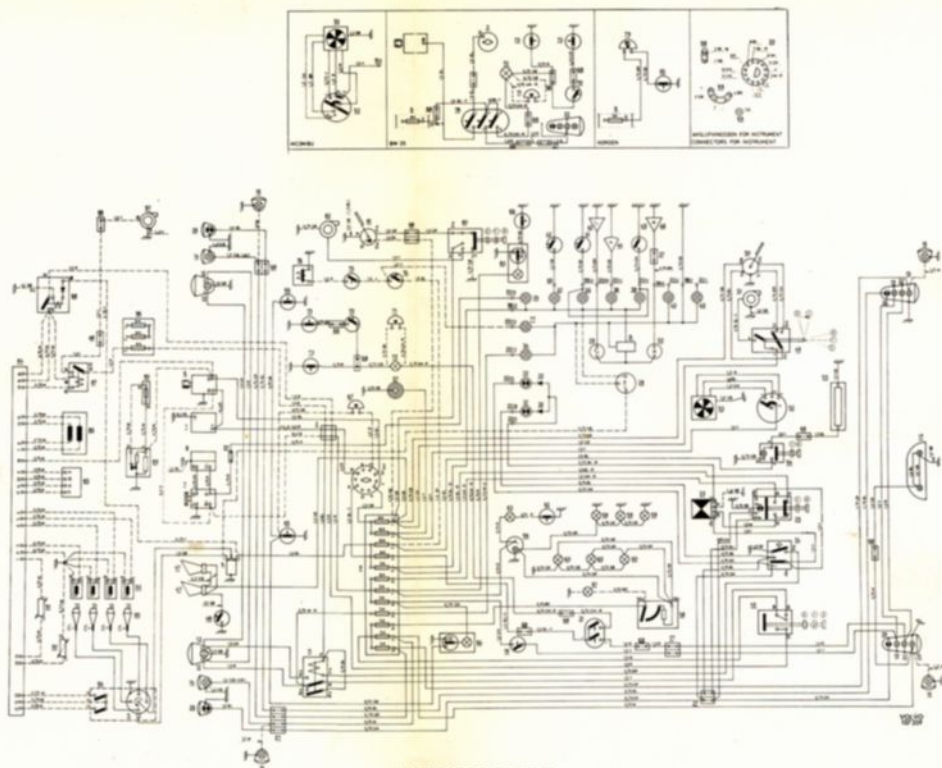


ILLUSTRATION 3-B.
WIRING DIAGRAM 145

Pos. Title
86. Pressure sensor
87. Relay for fuel pump
88. Main relay for fuel injection
89. Thermal timer contact
90. Start valve
91. Temperature sensor I
92. Temperature sensor II
93. Injection valves
94. Trip contact
95. Spark plug
96. Fuelcocks
97. Fuel pump
98. Connection at instrument
99. Connection at instrument

Colour code
SB Black
Y Yellow
Bl Blue
Bl-Y Blue-Yellow
Bl-R Blue-Red
Gr-R Green-Red
R Red
Gr Green
W-R White-Red
W White
Br Brown
Gr Grey