


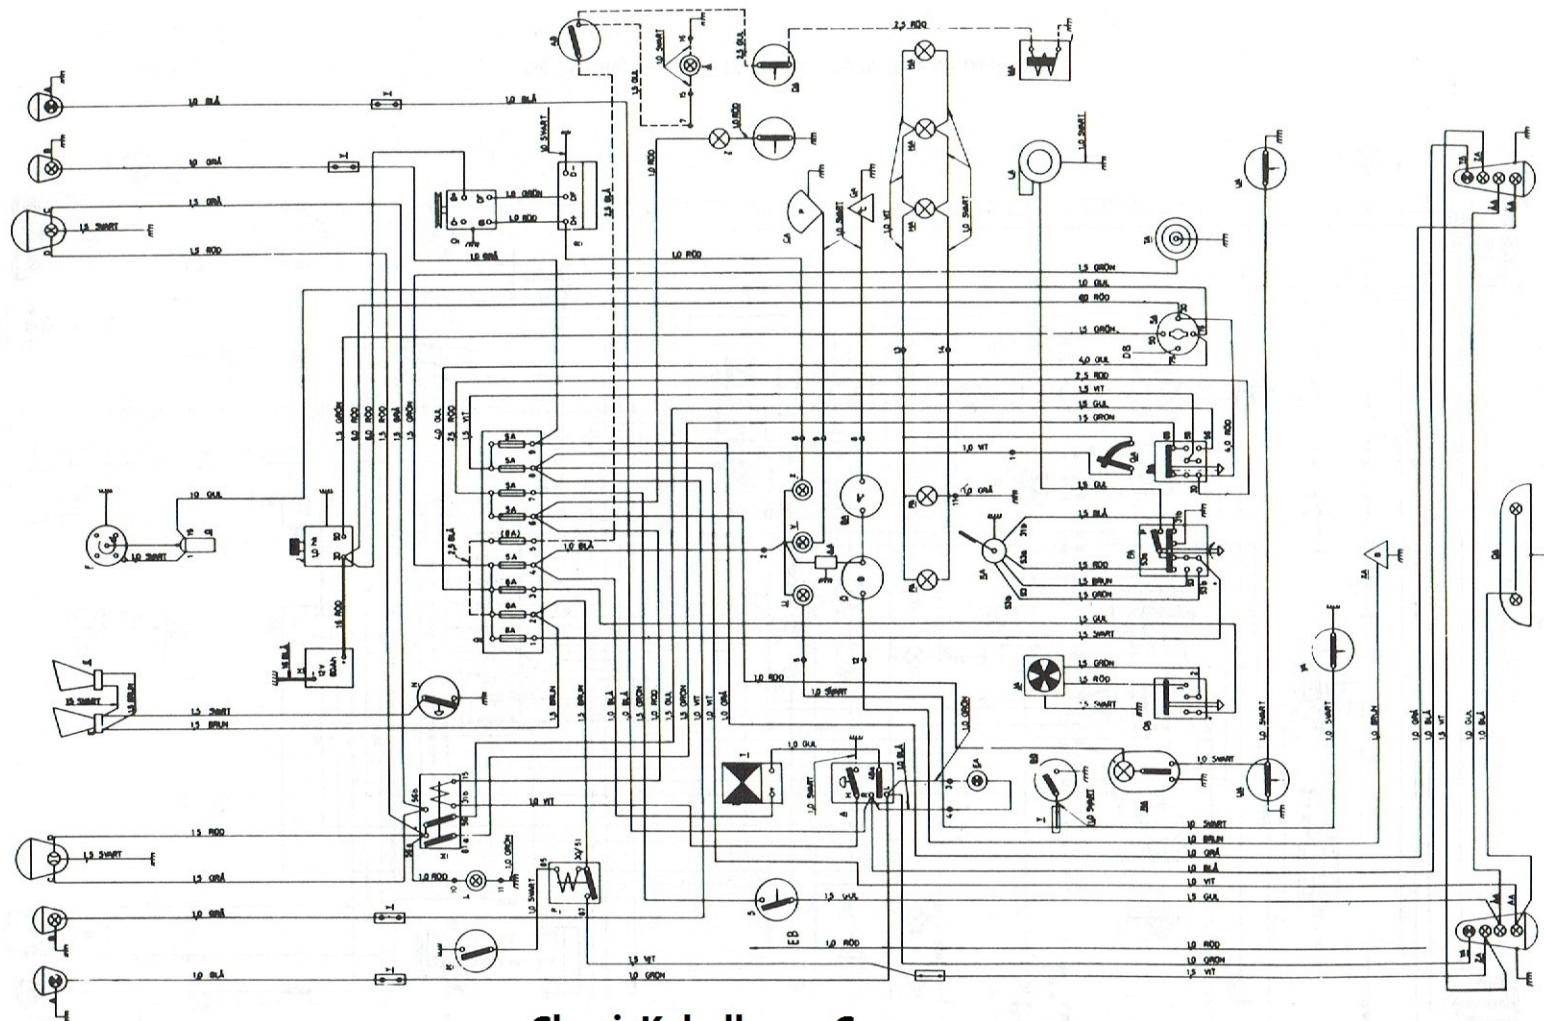

www.ClassicKabelboomCompany.com

Wiring diagram, 140 series - 1969

1 (A)	Direction indicators	17 (R)	Regulator	34 (GA)	Water temperature transmitter	51 (AA)	Stop light
2 (B)	Sidelights	18 (S)	Handbrake switch	35 (HA)	Heater control panel lights	52 (AA)	Tail light
3 (C)	Headlamps (dipped)	19 (T)	Flasher unit	36 (JA)	Blower	53 (OA)	Number plate light
4 (D)	Headlamps (main beam)	20 (U)	Handbrake on, indicator	37 (KA)	Windscreen wiper	54 (AB)	Overdrive control switch
5 (E)	Horn	21 (V)	Low oil pressure indicator	38 (LA)	Windscreen washer	55 (BB)	Brake failure warning
6 (F)	Distributor	22 (X)	Charging indicator	39 (MA)	Overdrive solenoid	56 (K)	Starter/reversing light switch on automatic gearbox
7 (G)	Ignition coil	23 (Y)	Connector	40 (NA)	Interior lighting	57	Glove compartment switch
8 (H)	Battery	24 (Z)	Glove compartment light	41 (OA)	Blower control switch	58	Rear window heater (1970 only)
9 (J)	Starter	25 (A)	Overdrive indicator	42 (PA)	Wiper and washer switch	59	Switch for 58
10 (K)	Reversing light switch	26 (A)	Column lights switch	43 (QA)	Dimmer	60	Sidelights repeater (USA only)
11 (L)	Main beam indicator	27 (O)	Fuel gauge	44 (RA)	Lighting switch	61	Relay for 58
12 (M)	Headlamp relay	28 (AA)	Voltage stabilizer	45 (SA)	Ignition switch	62	Instrument panel connectors
13 (N)	Horn ring	29 (BA)	Temperature gauge	46 (TA)	Cigar lighter	63	Ignition lock warning buzzer (USA only)
14 (O)	Alternator or generator	30 (CA)	Oil pressure transducer	47 (VA)	Door contact	64 (VA)	Driver's door switch
15 (P)	Reversing light relay or starter relay on automatic gearbox	31 (DA)	Overdrive switch	48 (VA)	Switch on handbrake		
16 (Q)	Fusebox	32 (EA)	Direction indicator repeater	49 (XA)	Fuel level transmitter		
		33 (FA)	Panel lighting	50 (ZA)	Reversing light		

Cable Colour Code

SB (Svart) = Black W (Vit) = White Y (Gul) = Yellow GN (Gron) = Green GR (Gra) = Grey
BL (Blu) = Blue R (Rod) = Red BR (Brun) = Brown